


TrakMotive® Tech Bulletin

Window Regulator Installation Tips Do the Job Right the First Time

1. Check Window Seals and Run Channels for excessive wear. Note: Any wear of these parts can create more friction on the glass which will cause more stress on the Window Regulator.

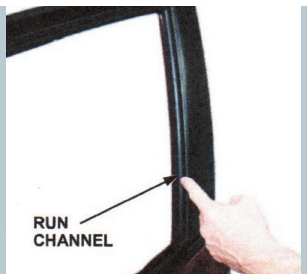

5. Use either a window holding tool or painter's tape to secure the window glass during installation. Do not use strong adhesive tapes like duct tape, as they will leave a sticky residue and can damage the vehicle's paint.



2. Window Run channels should be cleaned and lubricated before installing the new Window Regulator Assembly. Do not use an oil based lubricant. Silicone spray works well, as it will not ruin the rubber material over time.




6. Always replace door panel retaining clips.



3. Make sure to apply a liberal amount of grease on the slide area replacement Window Regulator. If there is not much grease present, white lithium grease is ideal for lubrication of the slide area.



7. Carefully align all components. It is important to operate the window and check for binding before re-installing door panel. Make adjustments where required.

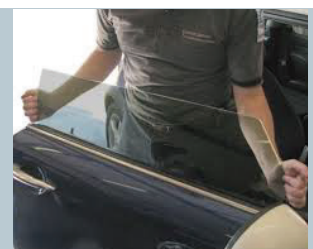

4. A plastic pry tool is useful to access the Window Regulator. This will help avoid damaging the delicate trim that can easily happen with a screwdriver or a metal pry bar.



8. **Note:** Aftermarket window tinting will add to the overall window thickness and can cause the window to travel slower, putting additional strain on the Window Regulator Assembly.



Contact your local TrakMotive Sales Representative or our Customer Service Department for more information on our complete Window Regulator program.

TrakMotive®

TrakMotive.com

United States Distribution Center: Advanced Innovative Technology Corp., 350 Nevada Street, Redlands, CA 92373.
Canadian Distribution Center: AIT Automotive Canada Inc., 6180 Ordan Dr., Mississauga, ONT L5T 2B3



**800.567.1608
905.670.1502**